


**Ecoair Hardware Installation Kit Instructions For:** 

**FORD 7.3L Diesel E Series** 

## ETK-E Hardware Kit Contents (pulley included)



## ETB-E Hardware Kit Contents

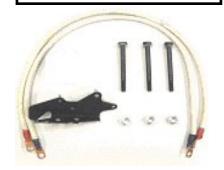



**1.** Disconnect batteries and remove existing alternator



**2.** Remove doghouse from inside vehicle



**3.** Remove air chamber box and support brace



**4.** Remove glow plug relays and bracket



**5.** Install bracket provided in kit onto stud previous supporting air chamber box



**6.** Install both solenoids on the new bracket

## **ECOAIR Corp.**



7. Attach cables and pulley prior to installing in vehicle



**8.** Install using the (3) spacer and bolts provided



**9.** Tighten bolts to 25 ft.lbs. max. Apply thread-lock



**10.** Rotate pulley by hand to verify that rotor spins freely. Install belt



**11.** Locate battery junction block in left front of vehicle



**12.** Route positive cable and connect to junction block



**13.** Route negative cable towards cab alongside solenoid and bracket



**14.** Connect negative cable to threaded boss on block



15. Install components removed during disassembly, then re-connect battery cables

## **ECOAIR Corp.**